Data sheet DSENWAAB0301 - september 2016 - Revised : no revised

PRESENTATION

This module regulates the current drawn by the valve's coil according to the position of the potentiometer on the front panel.

The proportional valve aperture is between a minimum and a maximum threshold defined by two potentiometers incorporated on the rear side.

The valve's coil is not supplied when the potentiometer on the front panel is turned in zero position.

A digital input « Slow / High flow » allows to divide the valve aperture by 2.

The gradient is adjusted by a third potentiometer at the rear side.

A flashing red LED indicates the correct module state.

APPLICATION

- To control an hydraulic proportional valve 12VDC and 24VDC.
- To control an hydraulic motor speed through a proportional valve (2 speeds).

PERFORMANCE


- Power supply: 9VDC to 32VDC.
- Regulation of circulating current in the coil, therefore the valve's aperture is independent of the supply voltage and the oil temperature.
- Accept proportional valves 12VDC and 24VDC (from 0 to 3A).
- · Selection of 2 flows or 2 speeds
- 1 potentiometer on the front panel.
- 3 potentiometers on the rear side (MIN, MAX and GRADIENT).
- By adjusting the MIN and MAX, the whole range of front panel potentiometer is useful.
- Protection against overvoltage, short circuit and reverse polarity.
- Fixing the front panel by the potentiometer barrel.

SUPPLIED ACCESSORIES



1 button to turn the potentiometer (diameter : 28mm, height : 19mm).



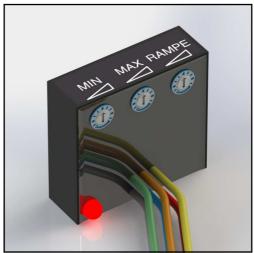

FULFILS THE STANDARDS

- CE mark compliant with 2014/30/UE
- E mark (ECE R10.05) N° 10R-05 13766 compliant with 2009/19/EC

EMC ISO11452-4

ESD ISO61000-4-2

Immunity: ISO7637-2

Protection: IP66/67

Vibration-shock: EN60068-2-32;-27;-64;-29

 Supply voltage: 9V à 32V ASAE EP 455-§5.10.1

Operating temperature: -40, +85°C
ASAE EP 455-§5.1.1 et EN60068-2-1;-2;-14;-30;-78
ASAE EP 455-§5.10.1

REACH (1907/2006) and RoHS (2011/65/EU)

POTENTIOMETER FOR 1 PWM PROPORTIONAL SOLENOID VALVE WITH SMALL/HIGH FLOW


Data sheet DSENWAAB0301 - september 2016 - Revised : no revised


WORKING

If the digital input « small flow (speed) / high flow (speed) is inactive (closed switch), the flow (speed) is divided by 2.

Small flow = ((high flow - MIN flow) / 2) + MIN flow

Small speed = ((high speed - MIN speed) / 2) + MIN speed

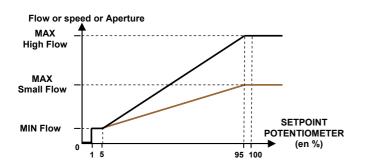

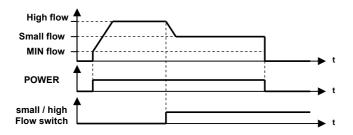

Aperture setting MIN: Set the setpoint potentiometer to 0 (Stop when potentiometer turn in reverse clockwise). Then turn it slightly in the opposite direction until the LED blinks. Set minimal aperture with MIN potentiometer on the rear panel.

Aperture setting MAX: Set the setpoint potentiomètre in max stop. (Stop when potentiometer turn in clockwise). Set maximal aperture with MAX potentiometer on the rear panel.

GRADIENT setting: Time between the minimum and maximum aperture opening, setting the GRADIENT potentiometer on the rear panel:



Running red light indicator:

If the valve is opened, the light indicator blinks :

If 2 flashes: PWM duty cycle < 5%

If 4 flashes: PWM duty cycle > 95%.

If 6 flashes: Valve shorted.

If 7 flashes: Valve not connected.

Information: If the setpoint potentiomètre is lower than 1% of the range, the LED is off (1 flash every 5 seconds) and the proportional valve is no longer supplied.


BUILDING IN SAFETY


All brands and all types of electronic modules can fail. Thus the necessary protection against the serious consequences of module failure should always be built into the system. For each application, an assessment should be made for the consequences of electronic module failure and uncontrolled or blocked movments.

NGV ELECTRONIQUE does not always have a complete view of the customer product design and application, so he assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using NGV ELECTRONIQUE components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.


NGV ELECTRONIQUE reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.

Reproduction of information in this data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and noticed.

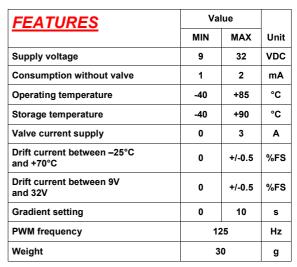

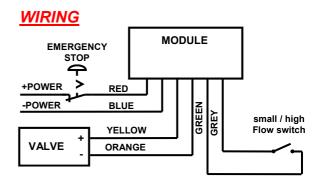

MECHANICAL DESIGN (in mm)

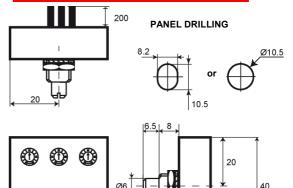

13 LENGHT OF 6 WIRES: 20cm

14.5

Tracability label description: (example)

V02bf → 02: Software Version, bf: Hardware Version

Ref: NGDF7536 → Product reference Ser: 1611-0003CW → tracability

40

16: Year, 11: Month, 0003: serial N°, CW: operator

ISO 14001 BURFAU VERITAS